


# CONCEPT MODELS

<http://www.con-sys.com/Index.htm>  
email:concept\_models@con-sys.com


19777 N. 76<sup>TH</sup> ST. - #1307  
Scottsdale, AZ 85255

**NOTE:** This kit consists of resin castings and must be assembled with an ACC cement (not provided) – both the thicker types as well as the thin. Solvent cements will **NOT** bond the parts together! ACC Cement accelerator is useful to speed setting

**1** Apply small amount of ACC cement to bolster ends and position against the ridges at the top of the truck frame. Allow cement to set.

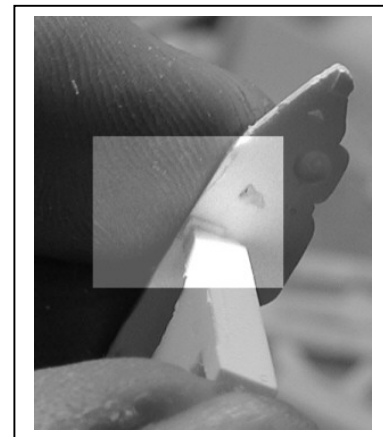

**2** Insert a wheel set as shown.

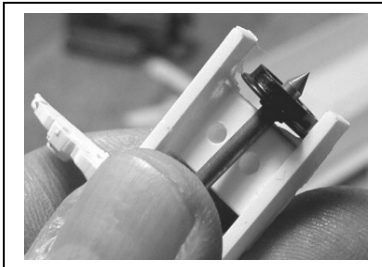

**3** Apply a small amount of ACC cement to the bolster ends and position against ridges at the top of the truck frame



**6-WHEEL TRUCK ASSEMBLY**