


CONCEPT MODELS

<http://www.con-sys.com/Index.htm>
email:concept_models@con-sys.com

44609 W. Canyon Creek Dr.
Maricopa, AZ 85239-5019

NOTE: This kit consists of resin castings and must be assembled with an ACC cement (not provided) – both the thicker types as well as the thin. Solvent cements will **NOT** bond the parts together! ACC Cement accelerator is useful to speed setting


1 Position a bolster and side frame as shown. Apply small amount of ACC cement at the joint of the pin and side frame. Allow cement to set

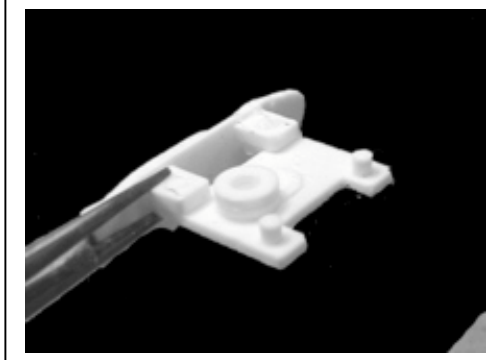

2 Insert a wheel set as shown. Apply a small amount of ACC cement to the joint of the pin and the side frame.



3 Install the remaining wheels.

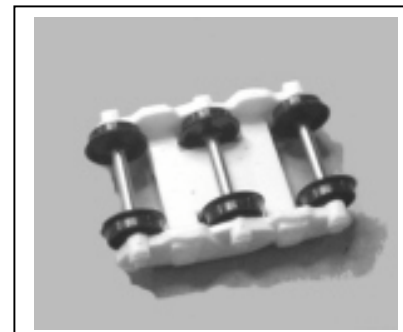

6-WHEEL TRUCK ASSEMBLY